




# HOT WATER

*On Demand*

MODEL #2300-700

*Instructions for Use*

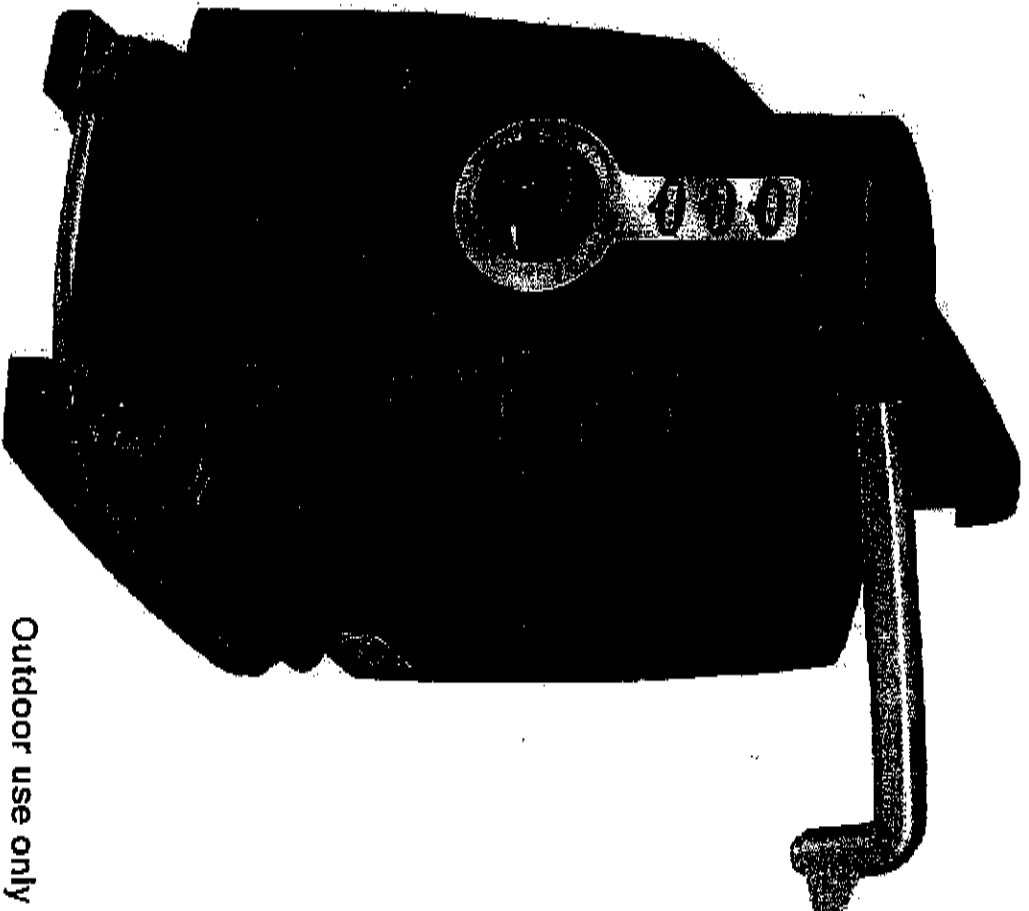

**Outdoor use only**

### **IMPORTANT**

Read these instructions for use carefully. Familiarise yourself with the appliance before connecting it to its propane cylinder. Keep these instructions for future reference. If you have questions about assembly, operation, servicing or repair, please call Coleman on (02) 8762 5000.

U.S. and other patents pending

## Contents

General Safety Information .....	2-3	Maintenance .....	9
System Overview .....	3	Troubleshooting Guide .....	10
Use Outdoors Only .....	4	Service & Spare Parts .....	10
Before You Go .....	5	Technical Data .....	10
To Set Up .....	5-7	Replacement Parts .....	11
Use and Operation .....	7-8	Warranty Information .....	12
Helpful Hints .....	9	Accessories .....	13
Storage .....	9		

## General Safety Information

This manual contains important information about the assembly, operation and maintenance of this water heater. General safety information is presented in these first few pages and is also located throughout the manual. Particular attention should be paid to information accompanied by the safety alert symbol "▲ DANGER", "▲ WARNING", "▲ CAUTION".

**IMPORTANT:** Read these instructions for use carefully. Familiarise yourself with the appliance before connecting it to its gas cylinder. Keep these instructions for future reference. This manual should be read in conjunction with the labeling on the product.

Safety precautions are essential when any mechanical or propane fueled equipment is involved. These precautions are necessary when using, storing, and servicing. Using this equipment with the respect and caution commanded will reduce the possibilities of personal injury or property damage.

The symbols shown below are used throughout this manual. Always heed these precautions, as they are essential when using any mechanical or propane fueled equipment.

### ▲ DANGER

DANGER indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.

### ▲ WARNING

WARNING indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

### ▲ CAUTION

CAUTION indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate personal injury, or property damage.

## FOR YOUR SAFETY

If you smell gas:

1. Do not attempt to light appliance.
2. Extinguish any open flame.
3. Disconnect from fuel supply.

If there is a leak on your appliance (smell of gas) and you cannot stop the gas flow, remove the appliance to a well ventilated location away from any ignition source. Only check for leaks outdoors using soapy water. Do not try to detect leaks using a flame.

2

## General Safety Information cont.

### FOR YOUR SAFETY

Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.

### ▲ DANGER



#### • CARBON MONOXIDE HAZARD

- This appliance can produce carbon monoxide which has no odor.
- Using it in an enclosed space (For example, caravan, tent, car, mobile home) may cause death.

#### USE OUTDOORS ONLY

#### ONLY USE IN WELL VENTILATED AREAS

- Never use this appliance in an enclosed space such as a camper, tent, car or home.

### ▲ DANGER



#### • EXPLOSION - FIRE HAZARD

- Never store propane near high heat, open flames, pilot lights, direct sunlight, other ignition sources or where temperatures exceed 120 degrees F (49°C).
- Propane is heavier than air and can accumulate in low places. If you smell gas, leave the area immediately.
- Never install or remove propane tank while heater is operating, near flame, pilot lights, other ignition sources or while heater is hot to touch.
- During operation, this product can be a source of ignition. Never use the heater in spaces that contain or may contain volatile or air-borne combustibles, or products such as gasoline, solvents, paint thinner, dust particles or unknown chemicals. Minimum clearances from combustible materials: 305mm from the sides & 1220mm from the top.
- Provide adequate clearances around air openings into the product.
- Do not obstruct air vents.

### ▲ DANGER

Failure to comply with the precautions and instructions provided with this product can result in death, serious bodily injury and property loss or damage from hazards of fire, explosion, burn, asphyxiation, and/or carbon monoxide poisoning.

Only persons who can understand and follow the instructions should use or service this product.

If you need assistance or information such as an instruction manual or labels, contact Coleman.

## ⚠ WARNING

- This product is fueled by propane gas. Propane gas is invisible, odorless, and flammable. An odorant is normally added to help detect leaks and can be described as a "rotten egg" smell. The odorant can fade over time so leaking gas is not always detectable by smell alone.
- Propane gas is heavier than air and leaking propane will sink to the lowest level possible. It can ignite by ignition sources including matches, lighters, sparks or open flames of any kind many metres away from the original leak. Use only propane gas set up for vapor withdrawal.
- Propane gas should be stored or used in compliance with local ordinances and codes or with AS/NZS 1595. Turn off propane when not in use.
- Disconnect propane before storing the heater.

## ⚠ WARNING

Not for home or recreational vehicle use.

We cannot foresee every use which may be made of our products. Check with your local fire safety authority if you have questions about use.

Other standards govern the use of fuel gases and heat producing products for specific uses. Your local authorities can advise you about these.

- Never refill disposable cylinders.
- Use the preset regulator that is installed in the water heater. Do not attempt to adjust.

## ⚠ WARNING



### • BURN HAZARD

- Never leave heater unattended when hot or in use.
- Accessible parts may be very hot
- Keep out of reach of children.


## ⚠ CAUTION

### SERVICE SAFETY

- Keep all connections and fittings clean. Inspect propane cylinder and propane connections for damage before attaching.
- During set up, check all connections and fittings for leaks using soapy water. Never use a flame. Bubbles indicate a leak. Check that the connection is not cross-threaded and that it is tight. Perform another leak check. If there is still a leak, remove the cylinder and contact Coleman for service or repairs.
- Use for water heating only. The appliance must only be serviced by an authorised person.
- Do not modify this appliance.
- Do not use this appliance if it has damaged or worn seals.
- Do not use this appliance if it is leaking, damaged or does not operate properly.
- Always use in an upright position.

## System Overview

Thank you for purchasing Coleman's **Hot Water on Demand™**. This portable and self-contained water heater provides hot water for cleaning, cooking, washing – it even makes water hot enough for a satisfying mug of tea, coffee or cocoa. Here are some of the key components.

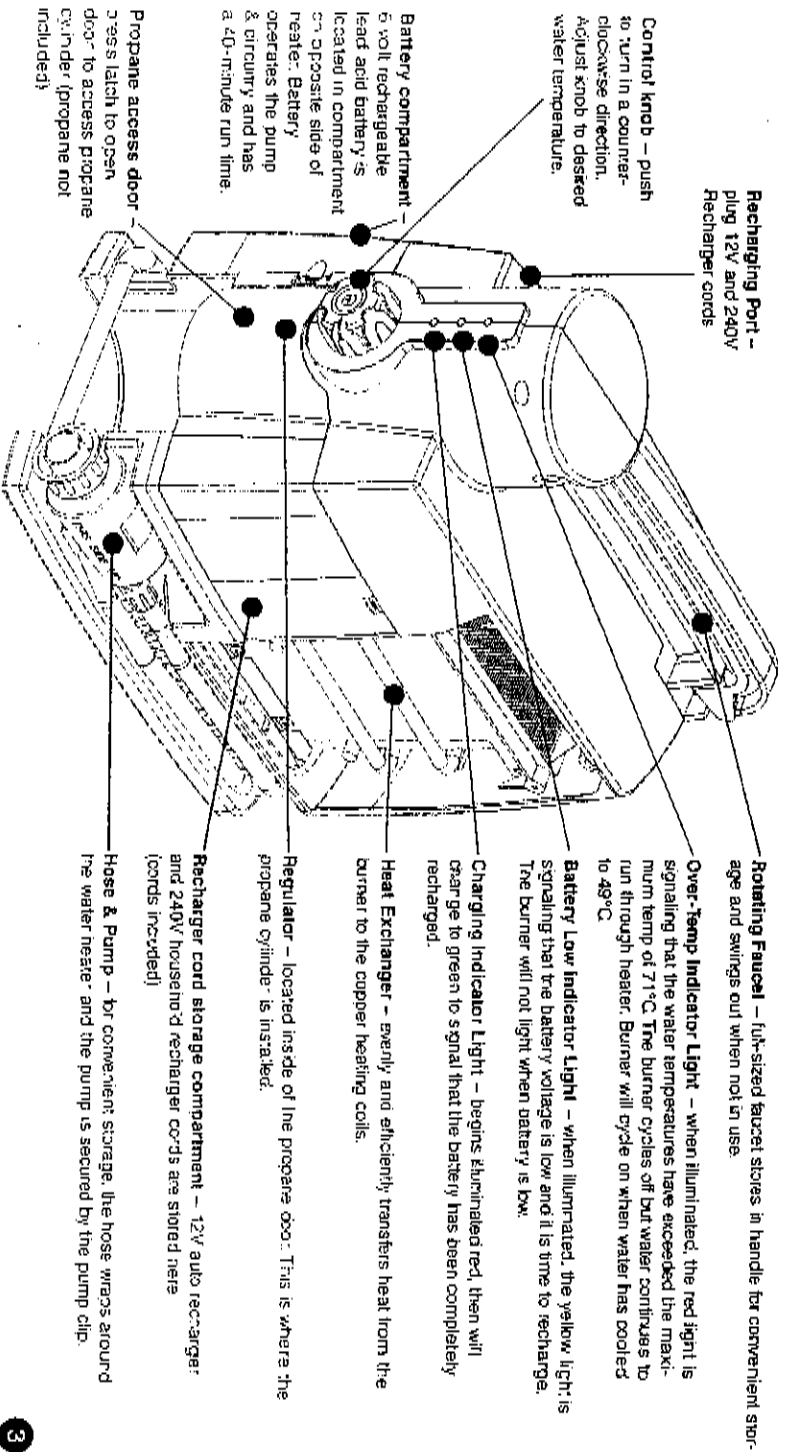

**Recharging Port** – plug 12V and 240V Recharger cords

**Control knob** – push to turn in a counter-clockwise direction. Adjust knob to desired water temperature.

**Battery compartment** – 6 volt rechargeable lead acid battery is located in compartment on opposite side of heater. Battery operates the pump & circuitry and has a 40-minute run time.

**Propane access door** – Press latch to open door to access propane cylinder (propane not included)

**Rotating Faucet** – full-sized faucet stores in handle for convenient storage and swings out when not in use.

**Over-Temp Indicator Light** – when illuminated, the red light is signaling that the water temperatures have exceeded the maximum temp of 71°C. The burner cycles off but water continues to run through heater. Burner will cycle on when water has cooled to 49°C.

**Battery Low Indicator Light** – when illuminated, the yellow light is signaling that the battery voltage is low and it is time to recharge. The burner will not light when battery is low.

**Charging Indicator Light** – begins illuminated red, then will change to green to signal that the battery has been completely recharged.

**Heat Exchanger** – evenly and efficiently transfers heat from the burner to the copper heating coils.

**Regulator** – located inside of the propane door. This is where the propane cylinder is installed.

**Recharger cord storage compartment** – 12V auto recharger and 240V household recharger cords are stored here (cords included)

**Hose & Pump** – for convenient storage, the hose wraps around the water heater and the pump is secured by the pump clip.

## Use Outdoors Only

This appliance shall only be used in an above ground open-air situation with natural ventilation, without stagnant areas, where gas leakage and products of combustion are rapidly dispersed by wind and natural convection.

Any outdoor enclosure in which the appliance is used shall comply with one of the following:

- An enclosure with walls on all sides, but with no overhead cover. See Figure 1.
- Within a partial enclosure that includes an overhead cover and no more than two walls. See Figure 2 & 3.
- Within a partial enclosure that includes an overhead cover and more than two walls, the following shall apply:
  - At least 25% of the total wall area is completely open, and 30% or more in total of the remaining wall side, back and front wall areas is open and unrestricted. See Figure 4 & 5.
  - In the case of balconies 20% or more of the total wall area shall be and remain open and unrestricted.

The following diagrams provide a diagrammatic representation of outdoor areas. Rectangular areas have been used in these figures - the same principles apply to any other shaped area.

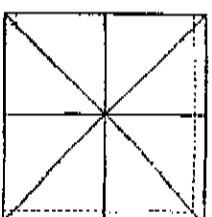
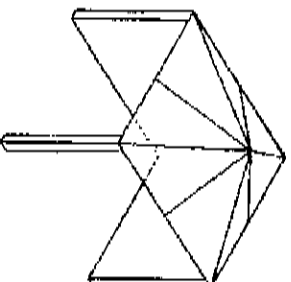
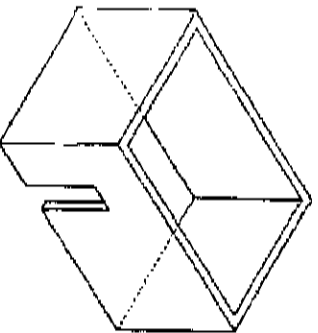


Figure 1 - Enclosure with walls on all sides but no overhead cover.

Figure 2 - Partial Enclosure with overhead cover and no more than two walls.

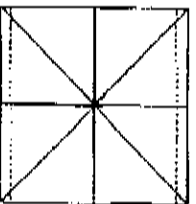
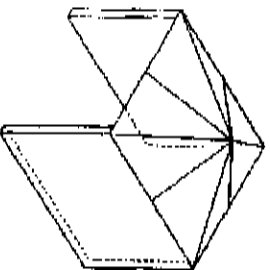


Figure 3 - Partial Enclosure with overhead cover and no more than two walls.

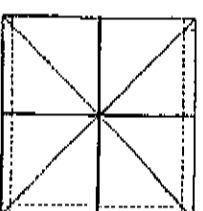
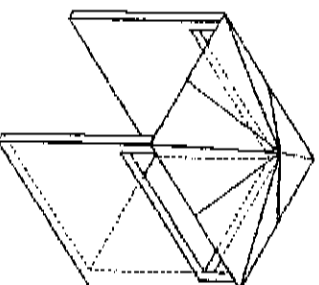


Figure 4 - Open side at least 25% of total wall area. 30% or more in total of the remaining wall area is open and unrestricted.


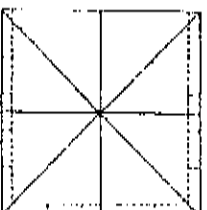


Figure 5 - Open side at least 25% of total wall area. 30 percent or more in total of the remaining wall area is open and unrestricted.


## Before You Go

Preparing Hot Water on Demand™ for initial use.


- **Unpack your new water heater** from the carton and make sure that all of the parts are included. If you find that one of the components is missing, please contact Coleman for a replacement. Phone: (02) 8762 5000.

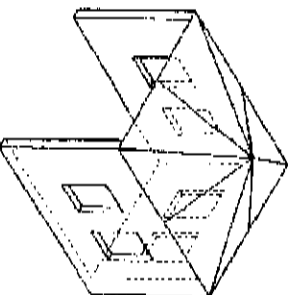

240V Ultra Collapsible  
Water Carrier  
(#809B605T)

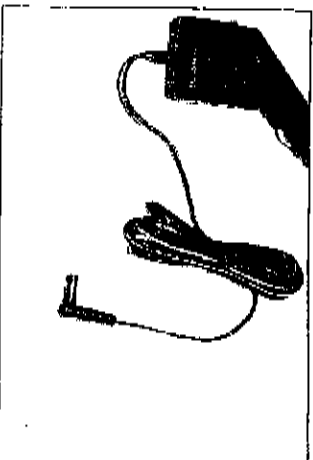

12 Volt Auto  
Recharger Cord  
(Located in storage compartment of your  
Hot Water on Demand™ unit)  
(#2300-4071)

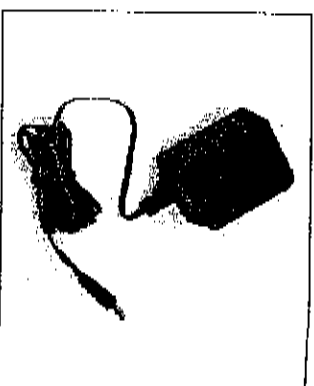

240 Volt Household  
Recharger Cord

- **Charge the battery.** Plug either 12 Volt Auto Recharger Cord or 240 Volt Household Recharger Cord into unit and the power source.
- Charging LED should come on. Allow eight hours to fully charge the battery. RED color indicates a charging battery. A GREEN color indicates a fully charged battery.
- **Charge the battery before using your water heater for the first time** (Fig. 1).
- **Clean before first use.** It is strongly recommended that you clean the heater prior to using for the first time. Follow the simple steps on page 6 before you leave home, and then clean at least once a year or when the hose becomes discolored with a white calcium build up.

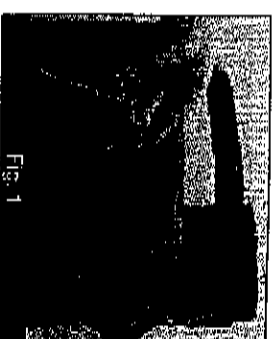



FIG. 1

## To Set Up

- **Select a level, sturdy surface for your water heater.** A picnic table or camp table is ideal. Do not operate **Hot Water on Demand™** from a position directly on the ground. (This allows water to drain, preventing damage while the unit is off in freezing temperatures.)
- **Fill the 19 Litre collapsible water container with water** – use only potable *drinking water*. **Never use water from a lake or stream that has not been purified.** Do not run any other liquid through **Hot Water on Demand™**.

### • WATER CONNECTION

- Unwrap the pump hose from around the water heater.
- Place the water carrier at a level below the water heater for proper drainage.
- Screw the water pump to the opening of the water container & hand tighten.
- Lay the water container on its side so the pump is towards the bottom of the container (step 2).
- Make sure to rotate the pump where **THIS SIDE UP™** is facing upward so pump will prime and water will flow.

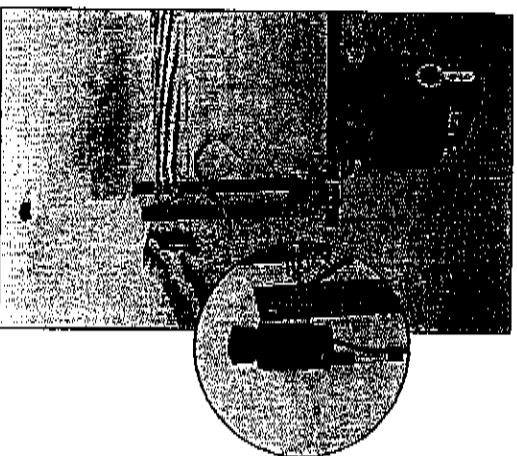

Step 1: Screw the Pump onto the opening of the Water Container and Hand Tighten.




Step 2: Lay the Water Container on its side so the Pump is towards the bottom of the container.



You can also submerge The Water Pump into an open water container such as a cooler. (Cooler not included.)

- Installation of propane cylinder in Hot Water on Demand™.
- Use standard propane cylinders made for camping products.
- Do **not** use 400 grain cylinders normally used for hand torches.
- Do **not** use MAPP gas cylinders or any other fuel except propane.
- Make sure the control knob is turned "OFF".
- Push in on the propane access door latch that is located on the left side of the door and swing door to opened position.
- Changing of the gas cylinder should be performed outside, in a well ventilated location away from people and any potential source of ignition such as naked flames, pilot flames etc.

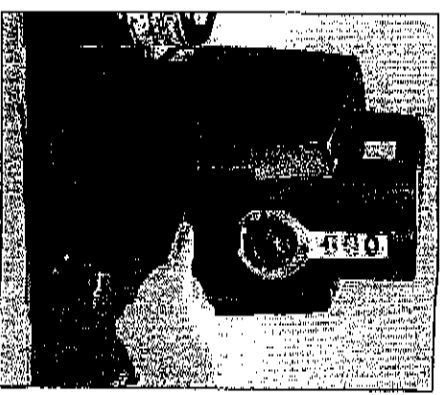

Open the Propane Access Door.


- Remove cap from propane cylinder but do not discard.
- While holding the propane cylinder upright, attach it to the REGULATOR located inside the door by turning clockwise. Be careful not to cross-thread, hand tighten only.

### ⚠ WARNING

• This appliance shall only be used with a Coleman 465g, 100% Propane gas cylinder certified to U.S. standard DOT-39 NRC 282290 M1110. IT MAY BE HAZARDOUS TO ATTEMPT TO FIT OTHER TYPES OF GAS CYLINDERS. Check that seals between the appliance and the gas cylinder are in place and in good condition before connecting the gas cylinder.  
Use only Coleman® accessories or parts. During heater set-up, check fittings for leaks using soapy water. Never use a flame. Never store gas cylinders in living spaces.



Remove propane cap.

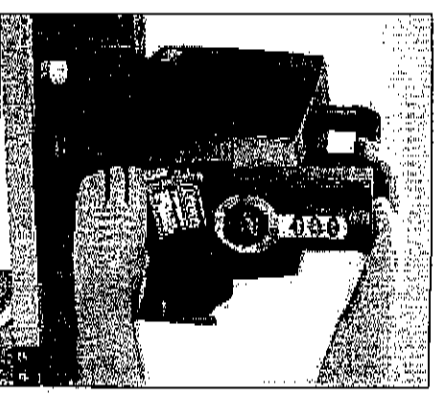

Install the propane cylinder.

- Check for Propane Leaks

### ⚠ WARNING

- Perform leak test outdoors.
- Extinguish all open flames.
- NEVER leak test when smoking.
- Do not use Hot Water on Demand™ until connection has been leak tested and does not leak.

- Make 60 to 90 mls of leak check solution (one part liquid dishwashing detergent and three parts water).
- Apply several drops of solution at the connection between the propane cylinder and the regulator. (Fig. 2)
- Bubbles indicate a leak.
- Check that the connection is not cross-threaded and that it is tight.
- Perform another leak check. If there is still a leak, remove the cylinder and contact Coleman for services or repair.



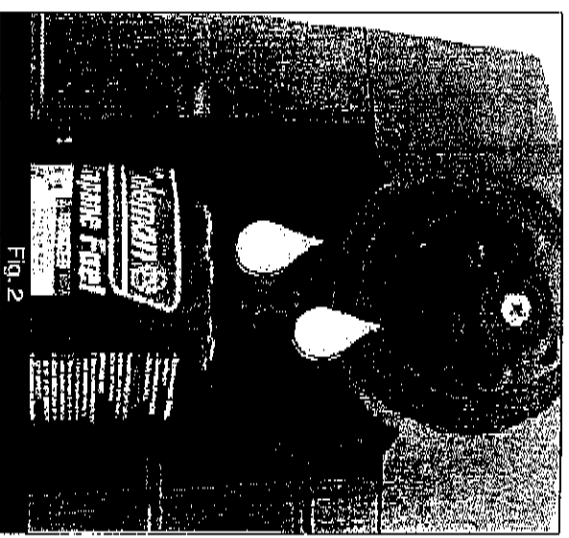


Fig. 2

• Close Front Propane Access Door

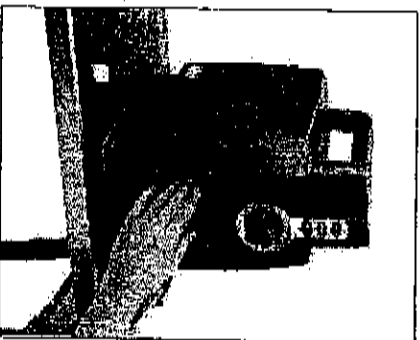

• Rotate  
Faucet out-  
ward from  
the stored  
position and  
place a  
water collec-  
tion basin  
under faucet.

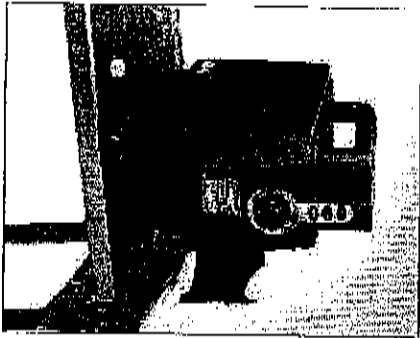

**Use and Operation**

- Clean before first use. It is strongly recommended that you clean the heater prior to using for the first time. Follow these simple steps before you leave home, and then clean at least once a year or when the hose becomes discolored with a white calcium build up.

**Cleaning instructions:**

1. In a clean container mix 7.5 litres of water with 340 grams of calcium, lime, and rust remover (available at the cleaner section of hardware, general merchandise and food stores).
2. Place the pump in the container with the water/solution. The label "This Side Up" on pump should be facing up. (Fig. 3)
3. Position the container with the water/solution so that it is placed under the faucet.
4. Push and turn the control knob and position the knob at the "warm" setting. (Fig. 4)
5. Circulate the water/solution through the water heater for 2 minutes, then turn off heater by turning the knob clockwise to the "off" position. (Fig. 5)
6. Dispose of the cleaning solution in a sink or other drain, do not dump on the ground.
7. Fill container with 9.5 litres of clean water.
8. Place the pump in the container with the water.
9. Position the water heater so the container with the water is placed under the faucet.
10. Turn the heater on by pushing and turning the control knob and position to the "cool" setting. (Fig. 6)
11. Circulate the clean water through the water heater for 2 minutes, then turn the knob clockwise to turn the heater off. (Fig. 7)
12. Repeat steps 6-11 with another batch of clean water.

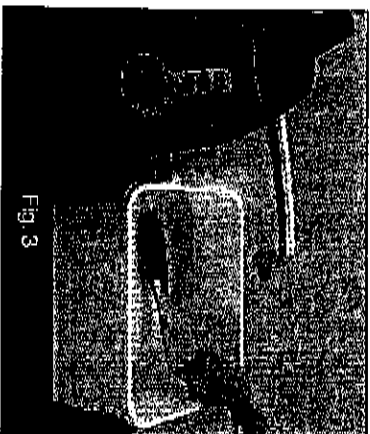


Fig. 3

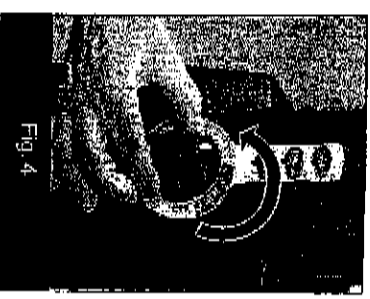


Fig. 4

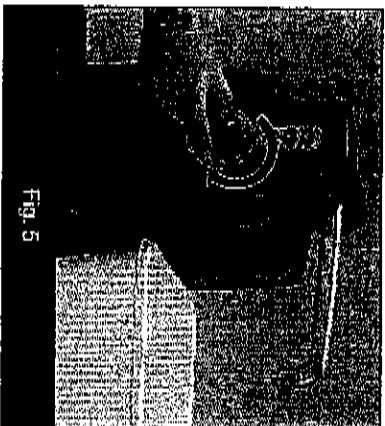


Fig. 5



Fig. 6

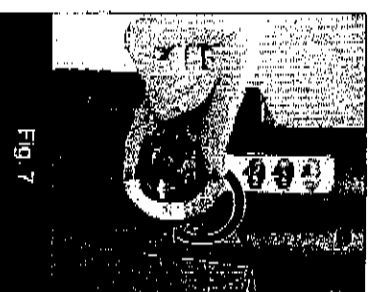


Fig. 7

Hot Water on Demand™ is now clean and ready for use.

Follow these simple steps for using **Hot Water on Demand™**. Complete Set-Up steps on previous pages.

## A CAUTION

Be cautious before plunging your hands into a basin of water by testing the temperature first. Ensure that the appliance is placed on a horizontal surface before operating. Do not move the appliance while it is in operation.

**NOTE:** Check electrical and quick connector before using **Hot Water on Demand™**.



Electrical Connection

Quick Connector

### For Unheated Water

- Rotate the faucet outward (Fig. 8).
- Push and turn the control knob counterclockwise and position the knob at the "cool" setting (Fig. 9).
- You can release the knob while unheated water is pumping.
- Turn the knob clockwise to turn the water heater "off" (Fig. 10). The resulting output water temperature will be the same temperature as your source water.
- **Hot Water on Demand™** will not cool water to a temperature lower than your source water in the cool setting.

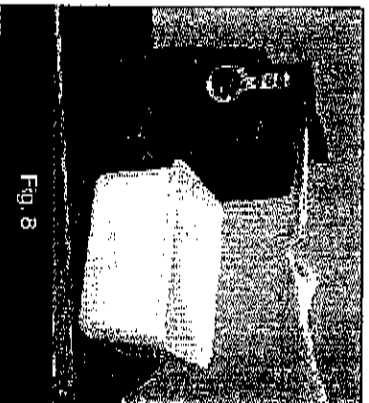


Fig. 8

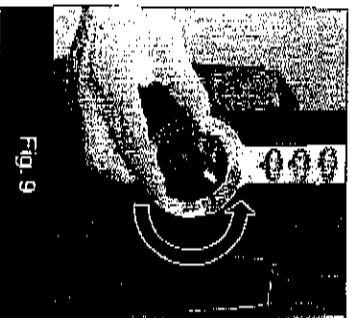


Fig. 9

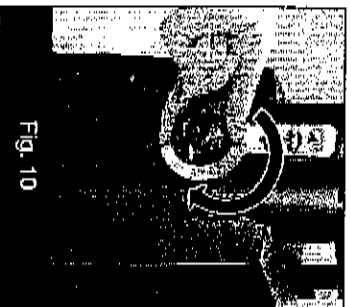


Fig. 10

**WARNING:** In the event of a gas leak turn the knob to the OFF position immediately. If there is a leak on your appliance (small of gas) and you cannot stop the gas flow, remove the appliance to a well ventilated location away from any ignition source. Only check for leaks outdoors using soapy water. Do not try to detect leaks using a flame.

### For Warm Water

- Rotate the faucet outward (Fig. 11).
- Push and turn the control knob counterclockwise and position the knob at the "warm" setting that is comfortable for you (Fig. 12).
- You can release the knob while warm water is pumping.
- Turn the knob clockwise to turn the water heater "off" (Fig. 13).
- The resulting output water temperature is dependant on the temperature of your source water.
- **Hot Water on Demand™** will maintain a constant temperature once you select the setting.
- **Hot Water on Demand™** will not increase the water temperature more than 13°C over the temperature of the source water in the warm setting.

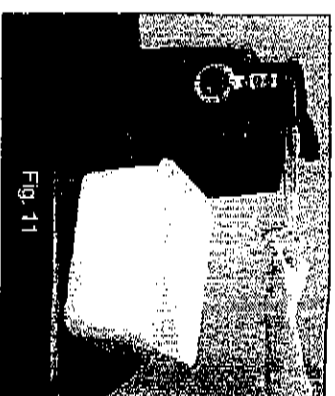


Fig. 11

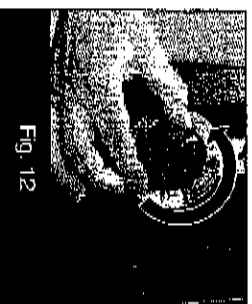


Fig. 12



Fig. 13

### For Hotter Water

- Rotate the faucet outward (Fig. 14).
- Push and turn the control knob counterclockwise.
- To reach the hottest water temperature, the knob must be held counterclockwise with one hand all the way to the "hot" setting (Fig. 15).
- When the water has reached your desired temperature, place your cup or mug underneath the faucet.
- When you release the knob, the water heater will automatically reset to warm or you can turn the knob clockwise to turn the water heater "off" (Fig. 16).
- **Hot Water on Demand™** will not increase the water temperature more than 38°C over the temperature of the source water in the "Hot" setting.

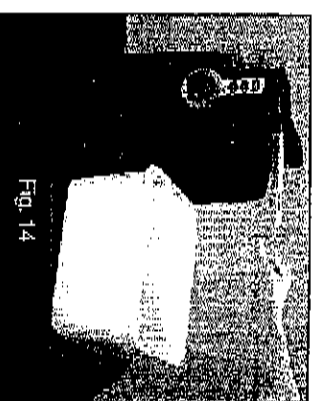


Fig. 14

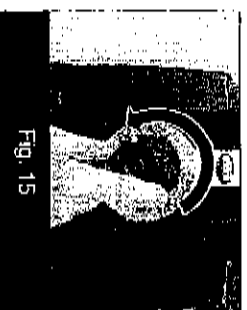


Fig. 15



Fig. 16

## Helpful Hints

- Due to the integrated mechanical and electrical over-temperature shut-off devices, **Hot Water on Demand™** will not produce water that continuously exceeds 71° C. The burner will simply cycle off while the water keeps flowing for your convenience. The burner will cycle back on when internal water temperatures reach about 49°C .
- **Hot Water on Demand™** is ideal for many outdoor cleaning tasks. Coleman supports the Leave No Trace Principles that encourage minimal impact to the environment while camping. You'll find that less soap is necessary with warm water than with cool or cold water, so use small amounts of biodegradable soap. Please dispose of your gray water responsibly. Wash yourself or dishes 6-1 metres away from streams or lakes to avoid soap run-off finding its way to a natural water source. Contact your campground or park to learn about their specific gray water disposal policy.
- **Hot Water on Demand™** will typically make 150 litres of warm or hot water on one full battery charge and a 455 gram cylinder of propane. Make sure to pack sufficient fuel for the duration of your outing.
- To customize and enhance the use of your **Hot Water on Demand™**, Coleman offers several accessories. Check your local retailer or order directly from Coleman on (02) 8762 5000 or [www.colemanaustralia.com.au](http://www.colemanaustralia.com.au).
- Continuous operation of water heater at warm setting for 20 minutes may cause the propane cylinder to freeze up. Let the cylinder thaw or replace with a fresh propane cylinder.

## Storage

- **Remove propane cylinder** from heater after use and before transporting or storing **Hot Water on Demand™**. Always store propane outdoors.
- **Drain water** from hoses before storing.
- **Recharge** the battery before storing.
- **For long term storage**, clean and dry **Hot Water on Demand™** and store indoors in a clean and dry location.
- Coleman's padded carry case is ideal for storing and transporting **Hot Water on Demand™**.

## Maintenance

- **Clean water heater** at least once a year or whenever a white build up appears in the hose. Refer to **Cleaning Instructions** on page 6 of this manual.
- **Charge battery** immediately after each outing to reach optimum performance.
- **Replacing battery** - Use only a 6-volt, 4 AmpHr rechargeable lead acid battery. Remove the screw from the cover on the right side of your water heater and remove the cover. Pull the battery out from storage compartment and remove the leads from the battery terminals. Place the connectors on the battery terminals making sure to put the red terminal on the red or “+” battery terminal and the black connector on the black or “-” battery terminal. Replacement batteries are available to order from Coleman.

## Troubleshooting Guide

Symptom	Problem	Solution
Yellow battery Low Light on during operation	Battery voltage low	Charge battery
	Battery defective	Replace battery (refer to maintenance section for instructions)
Burner will not light	Propane cylinder empty	Replace cylinder
	Propane cylinder frosted	Replace cylinder and reuse after thawing
	Electronic circuit defective	Send to Coleman Service Center
Low or no water flow (less than 3.8 litres per minute)	Battery lead disconnected	Remove battery cover & reinstall lead
	Pump is not positioned properly	Rotate pump so "THIS SIDE UP" is facing upward
	Water container out of water	Fill water container
	Pump screen clogged	Remove and clean screen
	Hose bent or kinked	Straighten hose
	Pump unplugged	Make sure the black wire is plugged into back of heater
	Water bubble in hose	Drain hose completely
Water leak at pump to container	Fitting cross-threaded	Remove pump and reconnect to water container
	Calcium buildup	Clean heater (refer to page 6 for cleaning instructions)
Hose turns white or discolors inside		
	Defective seal or break	Send to authorized Coleman Service Center
Water leaking from inside heater		

## Service & Spare Parts

- Repairs to gas passages, electrical circuitry and associated components should be done only by Coleman or an authorized service person.
- Owner repair and service should be limited and performed only to the following:
  - Cleaning
  - Propane cylinder leak checks and cylinder replacement
  - Battery replacement
  - Pump & pump hose replacement
  - Repair to doors: battery compartment door & battery charger compartment door.
- For Coleman authorized service & spare parts call (02) 8762 5000.


## Technical Data

- Injector Orifice: Ø0.55mm
- Maximum Gas Consumption: 35.0MJ/h (694.5 g/h)
- Gas Supply Pressure: 2.75kPa
- Burner Pressure: 2.60kPa

# Replacement Parts

## Parts List

No.	Part No.	Description
1	2300-4071	12 volt Recharger Cord (auto)
2	2300-4081	240 volt Recharger Cord (household)
3	2300-6251	Pump and Hose Quick-connect
4	2300-1481	Pump Clip
5	2300-2111	Battery Compartment Door
6	2300-2201	Recharger Cord Compartment Door
7	2300-4061	6 volt Rechargeable Battery
8	2300-2051	PCV Rain Cover - fits over Hot Water On Demand™ unit when not in use

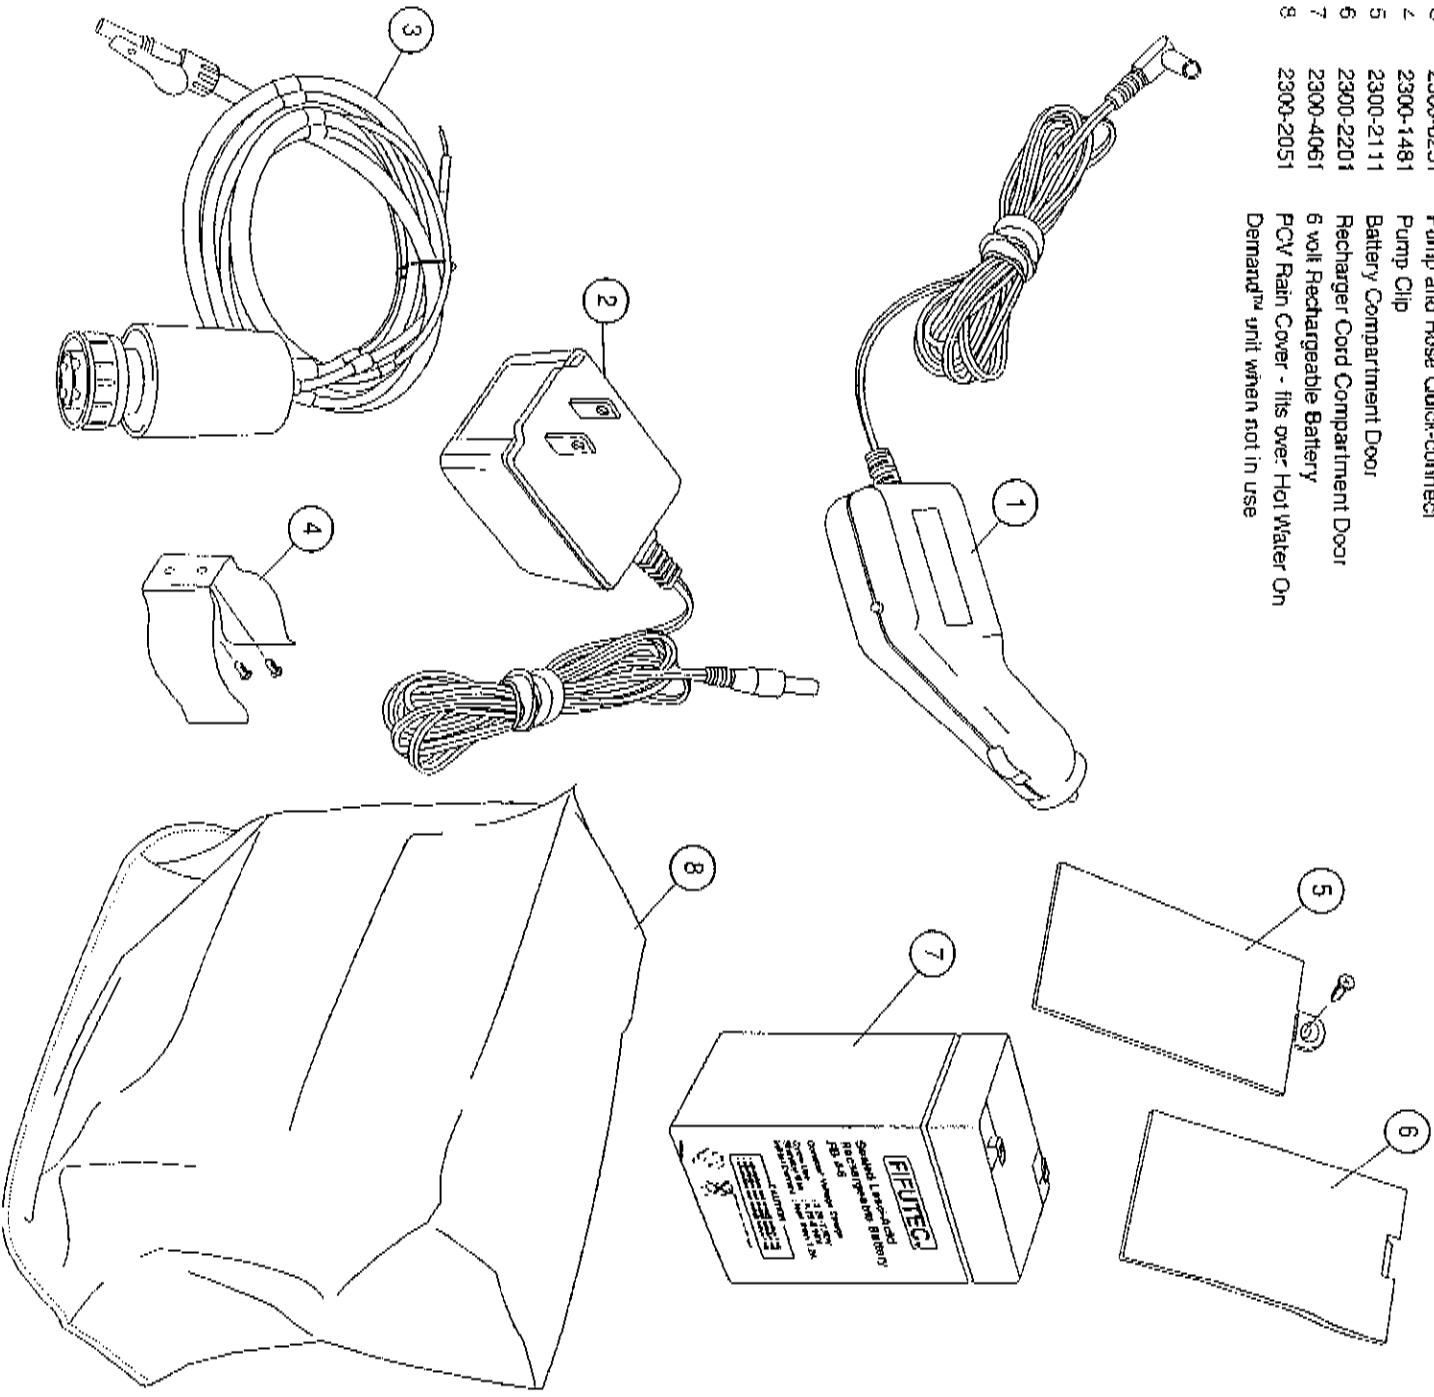

Contact Coleman

[www.colemanaustralia.com.au](http://www.colemanaustralia.com.au) • Phone: (02) 8762 5000

## **Coleman Lifetime Limited Warranty**

Coleman warrants that for the period that you own this product, it will be free from defects in material and workmanship. Coleman, at its option, will repair or replace this product or any component of the product found to be defective during the warranty period. Replacement will be made with a new or remanufactured product or component. If the product is no longer available, replacement may be made with a similar product of equal or greater value. This is your exclusive warranty.

This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty performance. Coleman dealers, service centers, or retail stores selling Coleman products do not have the right to alter, modify or in any way change the terms and conditions of this warranty.

This warranty does not cover normal wear of parts or damage resulting from any of the following: negligent use or misuse of the product, use on improper voltage or current, use contrary to the operating instructions, disassembly, repair or alteration by anyone other than Coleman or an authorized service center. Further, the warranty does not cover Acts of God, such as fire, flood, hurricanes and tornadoes.

Coleman shall not be liable for any incidental or consequential damages caused by the breach of any express or implied warranty or conditions. Except to the extent prohibited by applicable law, any implied warranty of merchantability or fitness for a particular purpose is limited in duration to the duration of the above warranty or conditions. Some states, provinces or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state or province to province.

### **HOW TO OBTAIN WARRANTY SERVICE**

For warranty service please return this item to your nearest Coleman retailer. You can find the nearest authorised Coleman Service centre by calling (02) 8762 5000, Coleman Brands Pty. Ltd. Suite 2, 1 Figtree Drive, Sydney Olympic Park NSW 2127 [www.colemanaustralia.com.au](http://www.colemanaustralia.com.au).

Do not mail products with fuel tanks or with disposable propane cylinders.  
If you have any questions about this warranty please contact Coleman.




# HOT WATER

*On Demand*

MODEL #2300-700

Instructions for Use

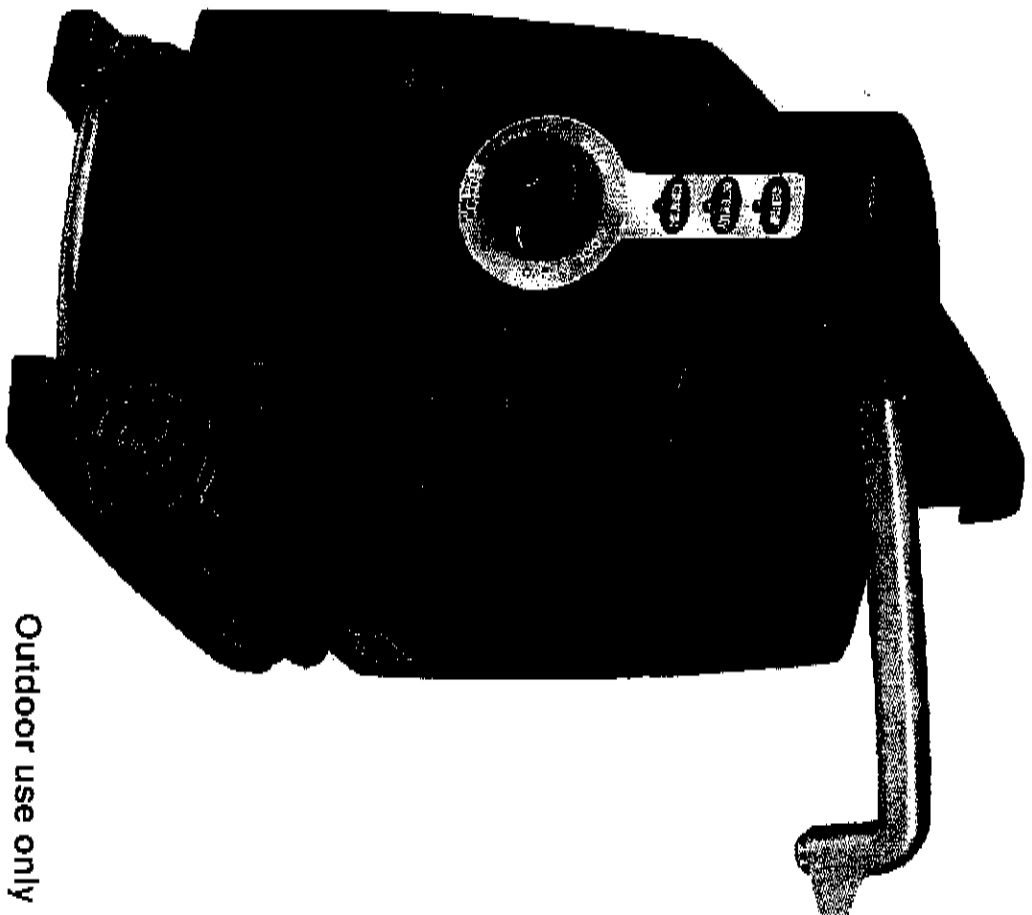

Outdoor use only

### IMPORTANT

Read these instructions for use carefully. Familiarise yourself with the appliance before connecting it to its propane cylinder. Keep these instructions for future reference. If you have questions about assembly, operation, servicing or repair, please call Coleman on (02) 8762 5000.

U.S. and other patents pending

## Contents

General Safety Information	2-3	Maintenance	9
System Overview	3	Troubleshooting Guide	10
Use Outdoors Only	4	Service & Spare Parts	10
Before You Go	5	Technical Data	10
To Set Up	5-7	Replacement Parts	11
Use and Operation	7-8	Warranty Information	12
Helpful Hints	9	Accessories	13
Storage	9		

## General Safety Information

This manual contains important information about the assembly, operation and maintenance of this water heater. General safety information is presented in these first few pages and is also located throughout the manual. Particular attention should be paid to information accompanied by the safety alert symbol: **▲ DANGER**, **▲ WARNING**, **▲ CAUTION**.

**IMPORTANT:** Read these instructions for use carefully. Familiarise yourself with the appliance before connecting it to its gas cylinder. Keep these instructions for future reference. This manual should be read in conjunction with the labelling on the product.

Safety precautions are essential when any mechanical or propane fueled equipment is involved. These precautions are necessary when using, storing, and servicing. Using the equipment with the respect and caution demanded will reduce the possibilities of personal injury or property damage.

The symbols shown below are used throughout this manual. Always heed these precautions, as they are essential when using any mechanical or propane fueled equipment.

### ▲ DANGER

**DANGER** indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.

### ▲ WARNING

**WARNING** indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

### ▲ CAUTION

**CAUTION** indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate personal injury, or property damage.

## FOR YOUR SAFETY

If you smell gas:

1. Do not attempt to light appliance.
2. Extinguish any open flame.
3. Disconnect from fuel supply.

If there is a leak on your appliance (smell of gas) and you cannot stop the gas flow, remove the appliance to a well ventilated location away from any ignition source. Only check for leaks outdoors using soapy water. Do not try to detect leaks using a flame.

## General Safety Information cont.

### FOR YOUR SAFETY

Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.

### ▲ DANGER



#### • CARBON MONOXIDE HAZARD

- This appliance can produce carbon monoxide which has no odor.
- Using it in an enclosed space (for example, caravan, tent, car, mobile home) may cause death.

#### USE OUTDOORS ONLY

#### ONLY USE IN WELL VENTILATED AREAS

- Never use this appliance in an enclosed space such as a camper, tent, car or home.

### ▲ DANGER



#### • EXPLOSION - FIRE HAZARD


- Never store propane near high heat, open flames, pilot lights, direct sunlight, other ignition sources or where temperatures exceed 120 degrees F (49°C).
- Propane is heavier than air and can accumulate in low places. If you smell gas, leave the area immediately.
- Never install or remove propane tank while heater is operating, near flame, pilot lights, other ignition sources or while heater is hot to touch.
- During operation, this product can be a source of ignition. Never use the heater in spaces that contain or may contain volatile or airborne combustibles, or products such as gasoline, solvents, paint thinner, dust particles or unknown chemicals. Minimum clearances from combustible materials: 305mm from the sides & 1220mm from the top.
- Provide adequate clearances around air openings into the product.
- Do not obstruct air vents.

### ▲ DANGER

Failure to comply with the precautions and instructions provided with this product can result in death, serious bodily injury and property loss or damage from hazards of fire, explosion, burn, asphyxiation, and/or carbon monoxide poisoning.

Only persons who can understand and follow the instructions should use or service this product.


If you need assistance or information such as an instruction manual or labels, contact Coleman.

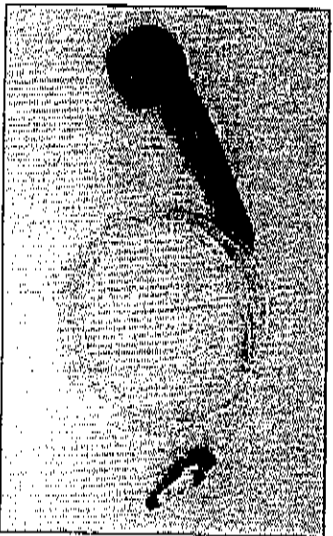

**Spray Adapter**

1.2 metre long hose easily attaches to faucet of **Hot Water on Demand™** with Quick-connect fitting. Handled spray head is ideal for a light shower.

*Not Included*  
(#2300-512)

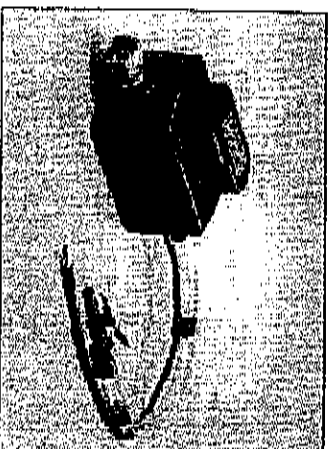

**Water Hose Adapter**

Regulates water pressure from input hose up to 690 kPa. Simply attach to **Hot Water on Demand™** for a continuous water supply.


*Not Included*  
(#2300-511)



**19 Litre Water Container**

Collapses for compact storage when not filled with water – handled carrier includes spigot to dispense water. Threaded opening is sized to screw securely to pump of **Hot Water on Demand™** for a sealed connection.

(#809B605T)

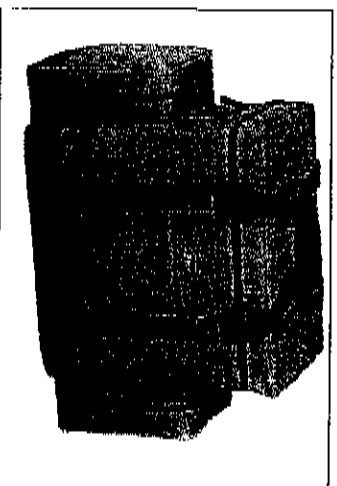

**Padded Carry Bag**

Sized to carry the **Hot Water on Demand™**. Adjustable shoulder strap or barrel handles, includes two zippered side pockets perfect for carrying two 465 gram, propane cylinders or other accessories. Includes a PVC raincover that can be used to protect heater from the elements.

*Not Included*  
(#2300-200)

Visit us at  
[www.colemanaustralia.com.au](http://www.colemanaustralia.com.au)



Coleman Brands Pty. Ltd. Suite 2, 1 Figtree Drive, Sydney Olympic Park NSW 2127.

[www.colemanaustralia.com.au](http://www.colemanaustralia.com.au) • Phone: (02) 8762 5000

©2004 The Coleman Company Inc. All Rights reserved.

Coleman® is a registered trademark of The Coleman Company, Inc.

Made in China

Patents Pending



## ⚠ WARNING

- This product is fueled by propane gas. Propane gas is invisible, odorless, and flammable. An odorant is normally added to help detect leaks and can be described as a "rotten egg" smell. The odorant can fade over time so leaking gas is not always detectable by smell alone.
- Propane gas is heavier than air and leaking propane will sink to the lowest level possible. It can ignite by ignition sources including matches, lighters, sparks or open flames of any kind many metres away from the original leak. Use only propane gas set up for vapor withdrawal.
- Propane gas should be stored or used in compliance with local ordinances and codes or with AS/NZS 1596. Turn off propane when not in use.
- Disconnect propane before storing the heater.

## ⚠ WARNING

Not for home or recreational vehicle use.

We cannot foresee every use which may be made of our products. **Check with your local fire safety authority if you have questions about use.**

Other standards govern the use of fuel gases and heat producing products for specific uses. Your local authorities can advise you about these.

- Never refill disposable cylinders.
- Use the preset regulator that is installed in the water heater. Do not attempt to adjust.

## ⚠ WARNING



### • BURN HAZARD

- Never leave heater unattended when hot or in use.
- Accessible parts may be very hot.
- Keep out of reach of children.


## ⚠ CAUTION

### SERVICE SAFETY

- Keep all connections and fittings clean. Inspect propane cylinder and propane connections for damage before attaching.
- During set up, check all connections and fittings for leaks using soapy water. Never use a flame. Bubbles indicate a leak. Check that the connection is not cross-threaded and that it is tight. Perform another leak check. If there is still a leak, remove the cylinder and contact Coleman for service or repairs.
- Use for water heating only. This appliance must only be serviced by an authorised person.
- Do not modify this appliance.
- Do not use this appliance if it has damaged or worn seals.
- Do not use this appliance if it is leaking, damaged or does not operate properly.
- Always use in an upright position.

## System Overview

Thank you for purchasing Coleman's **HotWater on Demand™**. This portable and self-contained water heater provides hot water for cleaning, cooking, washing – it even makes water hot enough for a satisfying mug of tea, coffee or cocoa. Here are some of the key components.

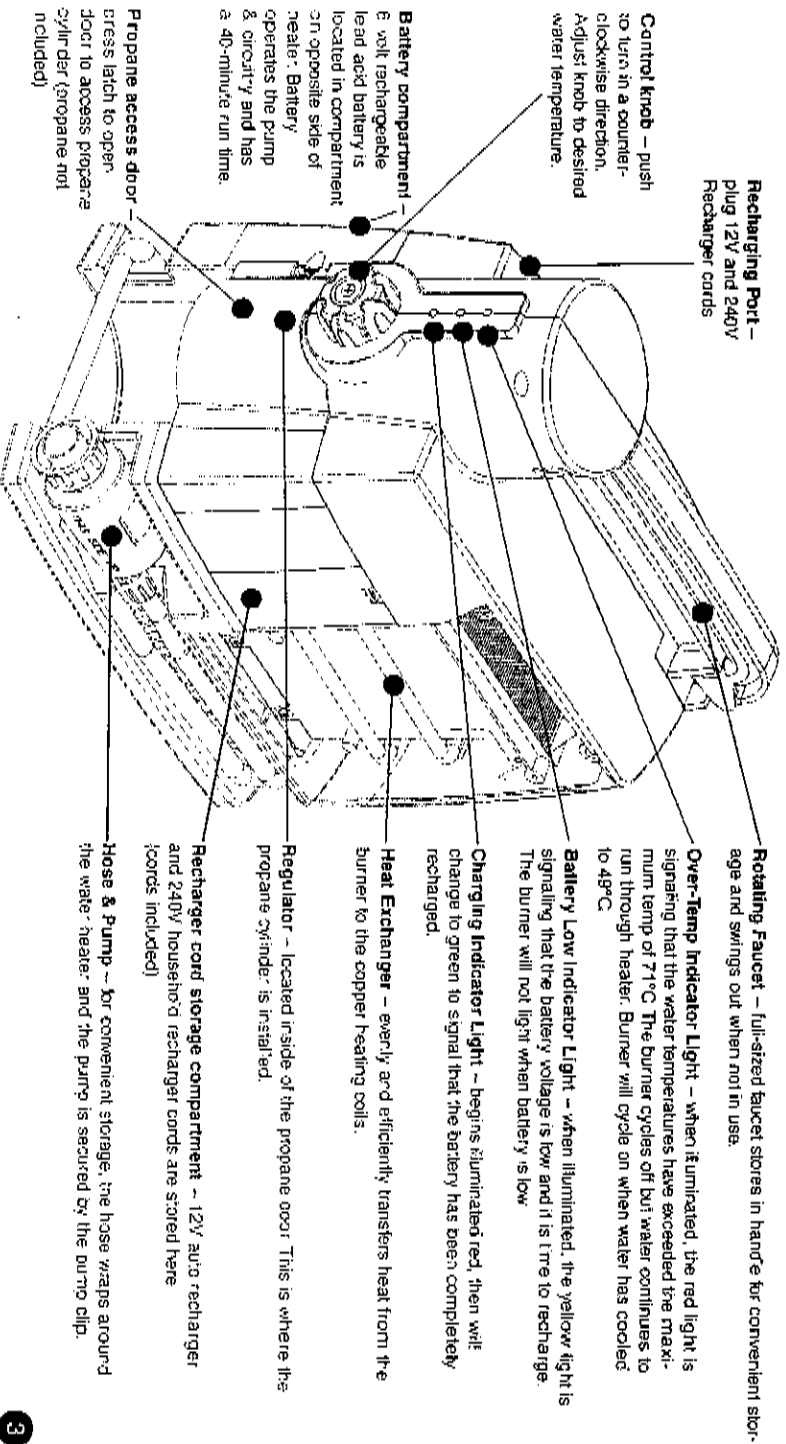

## Use Outdoors Only

This appliance shall only be used in an above ground open-air situation with natural ventilation, without stagnant areas, where gas leakage and products of combustion are rapidly dispersed by wind and natural convection.

Any outdoor enclosure in which the appliance is used shall comply with one of the following:

- An enclosure with walls on all sides, but with no overhead cover. See Figure 1.
- Within a partial enclosure that includes an overhead cover and no more than two walls. See Figure 2 & 3.
- Within a partial enclosure that includes an overhead cover and more than two walls, the following shall apply:
  - At least 25% of the total wall area is completely open, and 30% or more in total of the remaining wall side, back and front wall areas is open and unrestricted. See Figure 4 & 5.
  - In the case of balconies 20% or more of the total wall area shall be and remain open and unrestricted.

The following diagrams provide a diagrammatic representation of outdoor areas. Rectangular areas have been used in these figures - the same principles apply to any other shaped area.

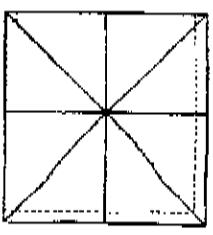
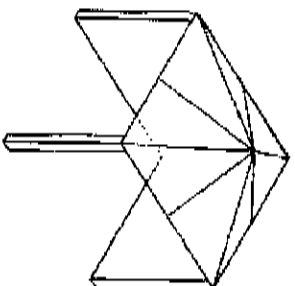
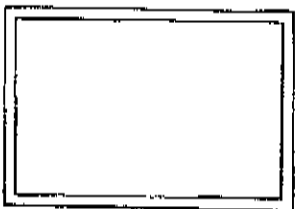
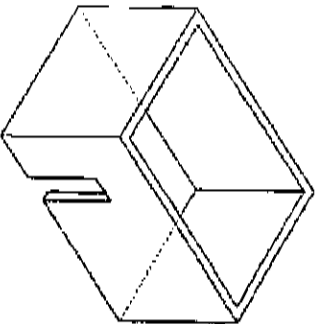


Figure 1 - Enclosure with walls on all sides but no overhead cover.

Figure 2 - Partial Enclosure with overhead cover and no more than two walls.

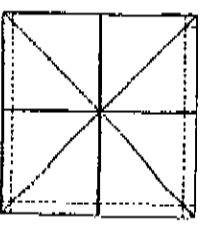
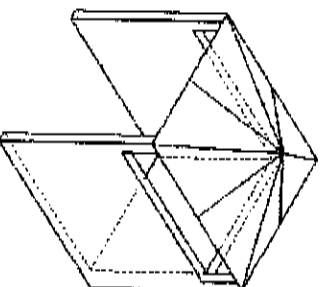
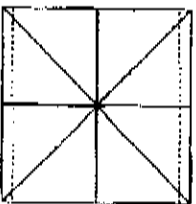
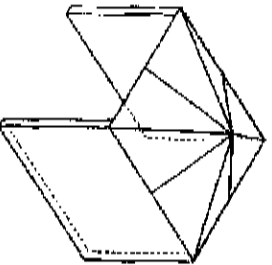


Figure 3 - Partial Enclosure with overhead cover and no more than two walls.

Figure 4 - Open side at least 25% of total wall area, 30% or more in total of the remaining wall area is open and unrestricted.


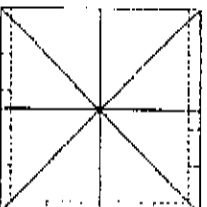


Figure 5 - Open side at least 25% of total wall area, 30 percent or more in total of the remaining wall area is open and unrestricted.


## Before You Go

Preparing **Hot Water on Demand™** for initial use.


- **Unpack your new water heater** from the carton and make sure that all of the parts are included. If you find that one of the components is missing, please contact Coleman for a replacement. Phone: (02) 8762 5000.

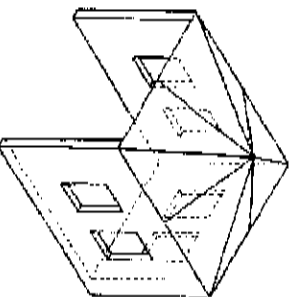

**19 Lite Collapsible  
Water Carrier**  
(#90966251)

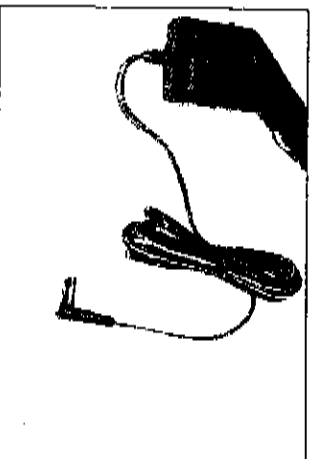

**12 Volt Auto  
Recharger Cord**  
(Located in storage compartment of your  
Hot Water on Demand™ unit)  
(#2300-4071)

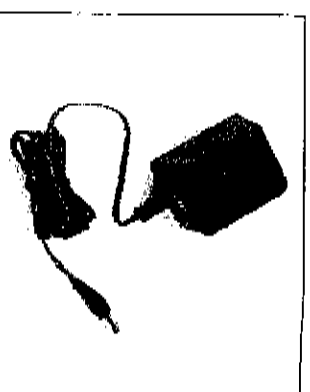

**240 Volt Household  
Recharger Cord**

- **Charge the battery.** Plug either 12 Volt Auto Recharger Cord or 240 Volt Household Recharger Cord into unit and the power source.
- Charging LED should come on. Allow eight hours to fully charge the battery. RED color indicates a charging battery. A GREEN color indicates a fully charged battery.
- **Charge the battery before using your water heater for the first time** (Fig. 1).
- **Clean before first use.** It is strongly recommended that you clean the heater prior to using for the first time. Follow the simple steps on page 6 before you leave home, and then clean at least once a year or when the hose becomes discolored with a white calcium build up.




FIG. 1

## To Set Up

- **Select a level, sturdy surface for your water heater.** A picnic table or camp table is ideal. Do not operate **Hot Water on Demand™** from a position directly on the ground. (This allows water to drain, preventing damage while the unit is off in freezing temperatures.)
- **Fill the 19 Lite collapsible water container** with water – use only potable *drinking water*. **Never use water from a lake or stream that has not been purified.** Do not run any other liquid through **Hot Water on Demand™**.

### • WATER CONNECTION


- Unwrap the pump hose from around the water heater.
- Place the water carrier at a level below the water heater for proper drainage.
- Screw the water pump to the opening of the water container & hand tighten.
- Lay the water container on its side so the pump is towards the bottom of the container (step 2).
- Make sure to rotate the pump where "THIS SIDE UP" is facing upward so pump will prime and water will flow.

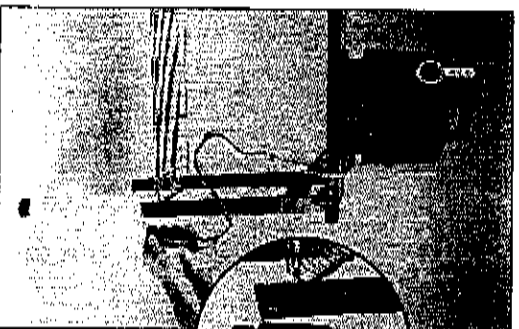

**Step 1: Screw the Pump onto the opening of the Water Container and Hand Tighten.**




**Step 2: Lay the Water Container on its side so the Pump is towards the bottom of the container.**

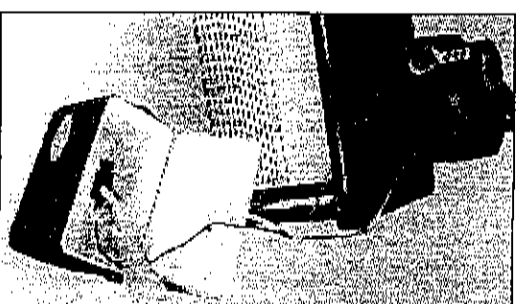

**You can also submerge The Water Pump into an open water container such as a cooler. (Cooler not included.)**

- **Installation of propane cylinder in Hot Water on Demand™**
  - Use standard propane cylinders made for camping products.
  - Do **not** use 400 gram cylinders normally used for hand torches.
  - Do **not** use MAPP gas cylinders or any other fuel except propane.
  - Make sure the control knob is turned "OFF".
  - Push in on the propane access door latch that is located on the left side of the door and swing door to opened position.

- **Changing of the gas cylinder should be performed outside, in a well ventilated location away from people and any potential source of ignition such as naked flames, pilot flames etc.**

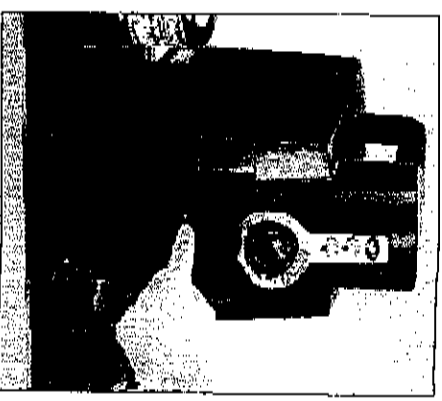

Open the Propane Access Door.


- Remove cap from propane cylinder but do not discard.
- While holding the propane cylinder upright, attach it to the **REGULATOR** located inside the door by turning clockwise. Be careful not to cross-thread, hand tighten only.

## **⚠ WARNING**

• This appliance shall only be used with a Coleman 465g, 100% Propane gas cylinder certified to U.S. standard DOT-39 NRC 23/2290 M110. **IT MAY BE HAZARDOUS TO ATTEMPT TO FIT OTHER TYPES OF GAS CYLINDERS.** Check that seals between the appliance and the gas cylinder are in place and in good condition before connecting the gas cylinder.  
Use only Coleman® accessories or parts. During heater set-up, check fittings for leaks using soapy water. Never use a flame. Never store gas cylinders in living spaces.



Remove propane cap.

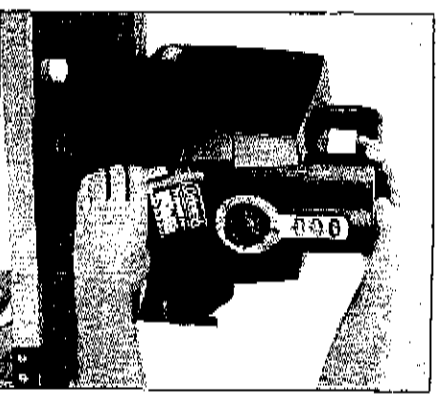

Install the propane cylinder.

- **Check for Propane Leaks**

## **⚠ WARNING**



- Perform leak test outdoors.
- Extinguish all open flames.
- **NEVER** leak test when smoking.
- Do not use **Hot Water on Demand™** until connection has been leak tested and does not leak.

- Make 60 to 90 mls of leak check solution (one part liquid dishwashing detergent and three parts water).
- Apply several drops of solution at the connection between the propane cylinder and the regulator. (Fig. 2)
- Bubbles indicate a leak.
- Check that the connection is not cross-threaded and that it is tight.
- Perform another leak check. If there is still a leak, remove the cylinder and contact Coleman for services or repair.



Fig. 2

• Close Front Propane Access Door

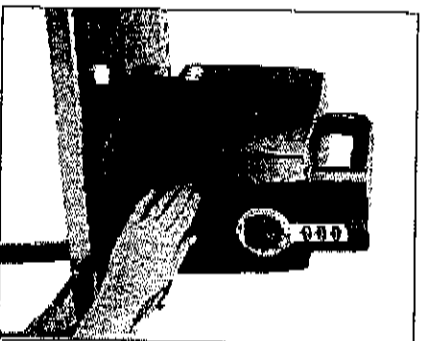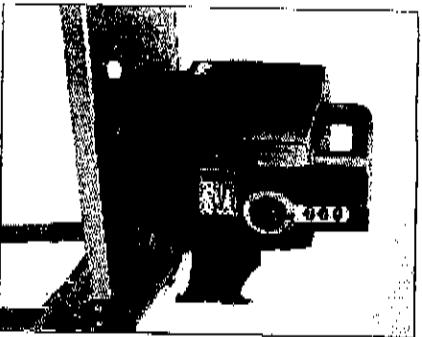

• Rotate

Faucet outward from the stored position and place a water collection basin under faucet.



**Use and Operation**

- Clean before first use. It is strongly recommended that you clean the heater prior to using for the first time. Follow these simple steps before you leave home, and then clean at least once a year or when the hose becomes discolored with a white calcium build up.

**Cleaning instructions:**

1. In a clean container mix 7.5 litres of water with 340 grams of calcium, lime, and rust remover (available at the cleaner section of hardware, general merchandise and food stores).
2. Place the pump in the container with the water/solution. The label "This Side Up" on pump should be facing up. (Fig. 3)
3. Position the container with the water/solution so that it is placed under the faucet.
4. Push and turn the control knob and position the knob at the "warm" setting. (Fig. 4)
5. Circulate the water/solution through the water heater for 2 minutes, then turn off heater by turning the knob clockwise to the "off" position. (Fig. 5)
6. Dispose of the cleaning solution in a sink or other drain, do not dump on the ground.
7. Fill container with 9.5 litres of clean water.
8. Place the pump in the container with the water.
9. Position the water heater so the container with the water is placed under the faucet.
10. Turn the heater on by pushing and turning the control knob and position to the "cool" setting. (Fig. 6)
11. Circulate the clean water through the water heater for 2 minutes, then turn the knob clockwise to turn the heater off. (Fig. 7)
12. Repeat steps 6-11 with another batch of clean water.

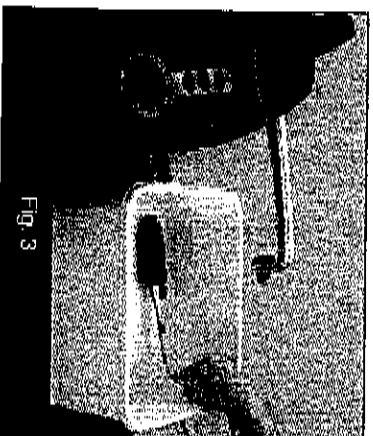


Fig. 3

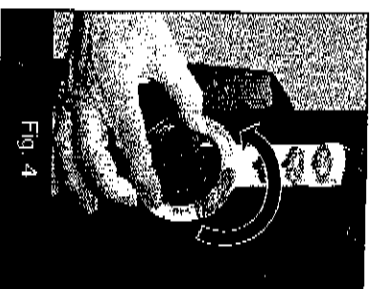


Fig. 4

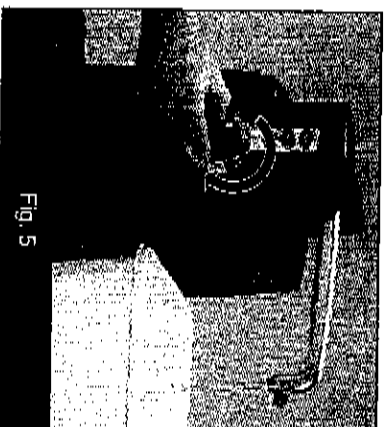


Fig. 5



Fig. 6

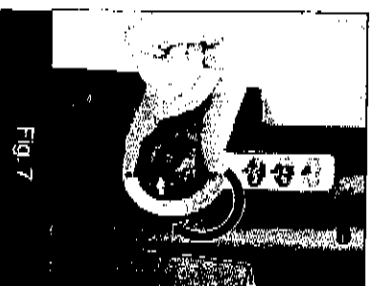


Fig. 7

Hot Water on Demand™ is now clean and ready for use.

## Use and Operation cont.

Follow these simple steps for using **Hot Water on Demand™**. Complete Set-Up steps on previous pages.

### **CAUTION**



Be cautious before plunging your hands into a basin of water by testing the temperature first. Ensure that the appliance is placed on a horizontal surface before operating. Do not move the appliance while it is in operation.

**NOTE:** Check electrical and quick connector before using **Hot Water on Demand™**.



#### **For Unheated Water**



- Rotate the faucet outward (Fig. 8).
- Push and turn the control knob counter-clockwise and position the knob at the "cool" setting (Fig. 9).
- You can release the knob while unheated water is pumping.
- Turn the knob clockwise to turn the water heater "off" (Fig. 10). The resulting output water temperature will be the same temperature as your source water.
- **Hot Water on Demand™** will not cool water to a temperature lower than your source water in the cool setting.

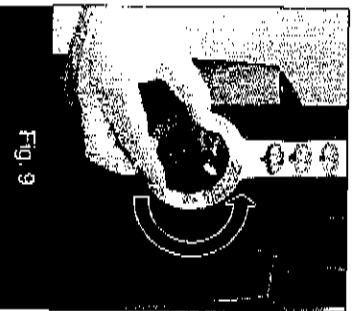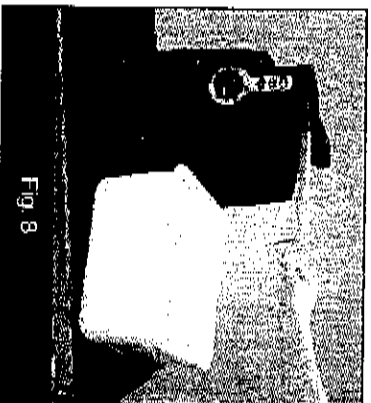

**WARNING:** In the event of a gas leak turn the knob to the **OFF** position immediately. If there is a leak on your appliance (smell of gas) and you cannot stop the gas flow, remove the appliance to a well-ventilated location away from any ignition source. Only check for leaks outdoors using soapy water. Do not try to detect leaks using a flame.




#### **For Warm Water**

- Rotate the faucet outward (Fig. 11).
- Push and turn the control knob counter-clockwise and position the knob at the "warm" setting that is comfortable for you (Fig. 12).
- You can release the knob while warm water is pumping.
- Turn the knob clockwise to turn the water heater "Off" (Fig. 13).
- The resulting output water temperature is dependant on the temperature of your source water.
- **Hot Water on Demand™** will maintain a constant temperature once you select the setting.
- **Hot Water on Demand™** will not increase the water temperature more than 13°C over the temperature of the source water in the warm setting.

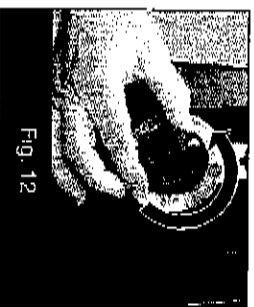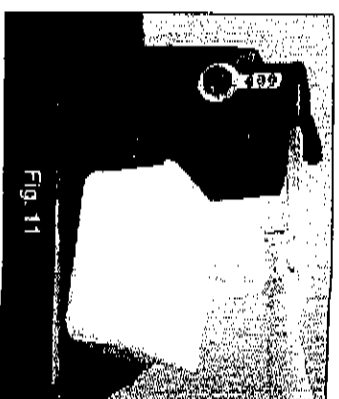

#### **For Hotter Water**

- Rotate the faucet outward (Fig. 14).
- Push and turn the control knob counter-clockwise.
- To reach the hottest water temperature, the knob must be held counterclockwise with one hand all the way to the "hot" setting (Fig. 15).
- When the water has reached your desired temperature, place your cup or mug underneath the faucet.
- When you release the knob, the water heater will automatically reset to warm or you can turn the knob clockwise to turn the water heater "off" (Fig. 16).
- **Hot Water on Demand™** will not increase the water temperature more than 38°C over the temperature of the source water in the "Hot" setting.

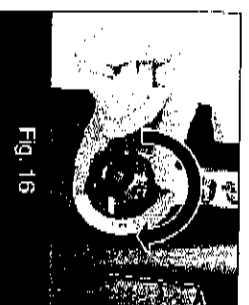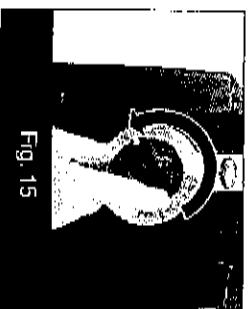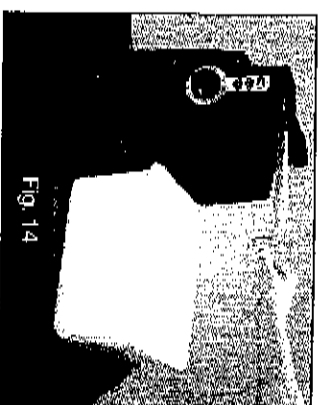

## Helpful Hints

- Due to the integrated mechanical and electrical over-temperature shut-off devices, **Hot Water on Demand™** will not produce water that continuously exceeds 71° C. The burner will simply cycle off while the water keeps flowing for your convenience. The burner will cycle back on when internal water temperatures reach about 49° C .
- **Hot Water on Demand™** is ideal for many outdoor cleaning tasks. Coleman supports the Leave No Trace Principles that encourage minimal impact to the environment while camping. You'll find that less soap is necessary with warm water than with cool or cold water, so use small amounts of biodegradable soap. Please dispose of your gray water responsibly. Wash yourself or dishes 61 metres away from streams or lakes to avoid soap run-off finding its way to a natural water source. Contact your campground or park to learn about their specific gray water disposal policy.
- **Hot Water on Demand™** will typically make 150 litres of warm or hot water on one full battery charge and a 465 gram cylinder of propane. Make sure to pack sufficient fuel for the duration of your outing.
- To customize and enhance the use of your **Hot Water on Demand™**, Coleman offers several accessories. Check your local retailer or order directly from Coleman on (02) 8762 5000 or [www.colemanaustralia.com.au](http://www.colemanaustralia.com.au).
- Continuous operation of water heater at warm setting for 20 minutes may cause the propane cylinder to freeze up. Let the cylinder thaw or replace with a fresh propane cylinder.

## Storage

- **Remove propane cylinder from heater after use and before transporting or storing Hot Water on Demand™.** Always store propane outdoors.
- **Drain water from hoses before storing.**
- **Recharge the battery before storing.**
- **For long term storage, clean and dry Hot Water on Demand™** and store indoors in a clean and dry location.
- Coleman's padded carry case is ideal for storing and transporting **Hot Water on Demand™**.

## Maintenance

- **Clean water heater at least once a year or whenever a white build up appears in the hose. Refer to Cleaning Instructions on page 6 of this manual.**
- **Charge battery immediately after each outing to reach optimum performance.**
- **Replacing battery** - Use only a 6-volt, 4 AmpHr rechargeable lead acid battery. Remove the screw from the cover on the right side of your water heater and remove the cover. Pull the battery out from storage compartment and remove the leads from the battery terminals. Place the connectors on the battery terminals making sure to put the red terminal on the red or "+" battery terminal and the black connector on the black or "-" battery terminal. Replacement batteries are available to order from Coleman.

## Troubleshooting Guide

Symptom	Problem	Solution
Yellow battery Low Light on during operation	Battery voltage low	Charge battery
	Battery defective	Replace battery (refer to maintenance section for instructions)
Burner will not light	Propane cylinder empty	Replace cylinder
	Propane cylinder frosted	Replace cylinder and reuse after thawing
	Electronic circuit defective	Send to Coleman Service Center
	Battery lead disconnected	Remove battery cover & reinstall lead
Low or no water flow (less than 3.8 litres per minute)	Battery lead disconnected	Remove battery cover & reinstall lead
	Pump is not positioned properly	Rotate pump so "THIS SIDE UP" is facing upward
	Water container out of water	Fill water container
	Pump screen clogged	Remove and clean screen
	Hose bent or kinked	Straighten hose
	Pump unplugged	Make sure the black wire is plugged into back of heater
	Water bubble in hose	Drain hose completely
Water leak at pump to container	Fitting cross-threaded	Remove pump and reconnect to water container
Hose turns white or discolors inside	Calcium buildup	Clean heater (refer to page 6 for cleaning instructions)
	Defective seal or break	Send to authorized Coleman Service Center
Water leaking from inside heater		

## Service & Spare Parts

- Repairs to gas passages, electrical circuitry and associated components should be done only by Coleman or an authorized service person.
- Owner repair and service should be limited and performed only to the following:
  - Cleaning
  - Propane cylinder leak checks and cylinder replacement
  - Battery replacement
  - Pump & pump hose replacement
  - Repair to doors: battery compartment door & battery charger compartment door.
- For Coleman authorized service & spare parts call (02) 8762 5000.


## Technical Data

- Injector Orifice: Ø0.55mm
- Maximum Gas Consumption: 35.0MJ/h (694.5 g/h)
- Gas Supply Pressure: 2.75kPa
- Burner Pressure: 2.60kPa

# Replacement Parts

## Parts List

No.	Part No.	Description
1	2300-4071	12 volt Recharger Cord (auto)
2	2300-4081	240 volt Recharger Cord (household)
3	2300-6251	Pump and Hose Quick-connect
4	2300-1481	Pump Clip
5	2300-2111	Battery Compartment Door
6	2300-2201	Recharger Cord Compartment Door
7	2300-4061	6 volt Rechargeable Battery
8	2300-2051	PCV Rain Cover - fits over Hot Water On Demand™ unit when not in use

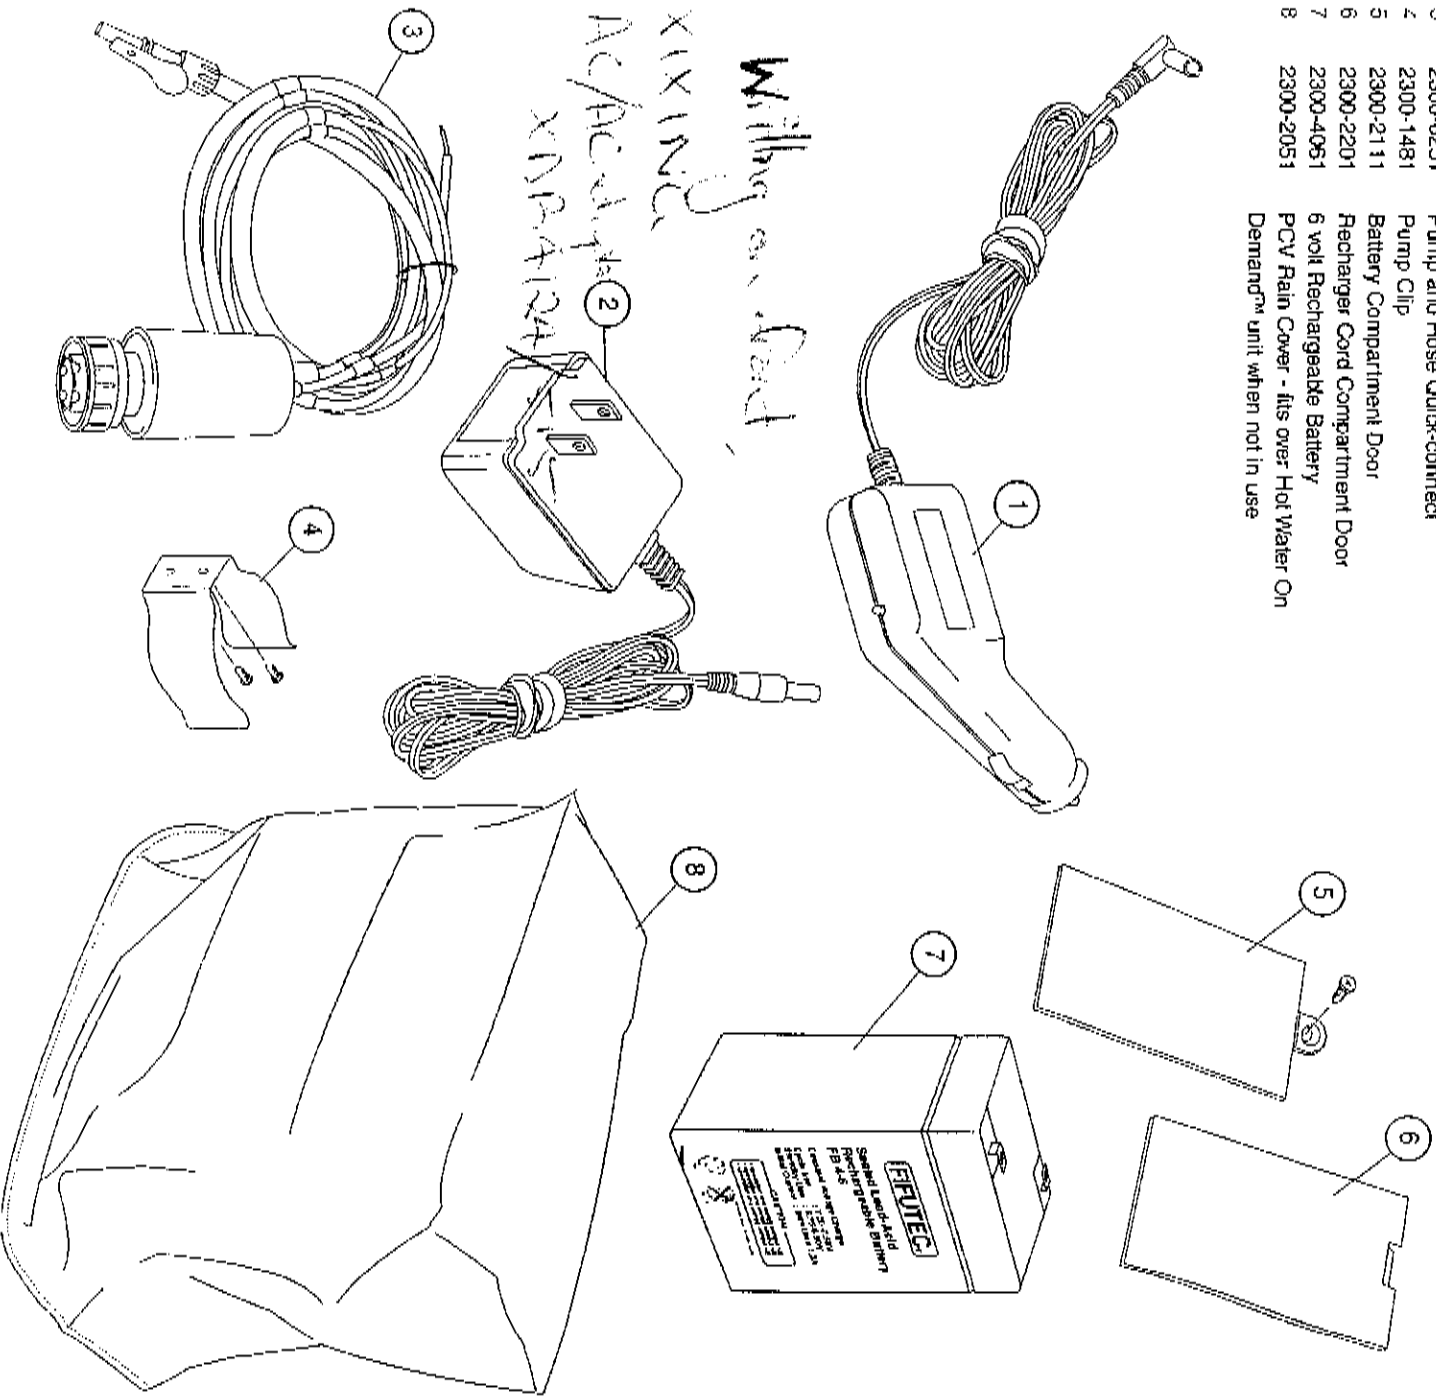

Contact Coleman

www.colemanaustralia.com.au • Phone: (02) 8762 5000

## **Coleman Lifetime Limited Warranty**

Coleman warrants that for the period that you own this product, it will be free from defects in material and workmanship. Coleman, at its option, will repair or replace this product or any component of the product found to be defective during the warranty period. Replacement will be made with a new or remanufactured product or component. If the product is no longer available, replacement may be made with a similar product of equal or greater value. This is your exclusive warranty.

This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty performance. Coleman dealers, service centers, or retail stores selling Coleman products do not have the right to alter, modify or in any way change the terms and conditions of this warranty.


This warranty does not cover normal wear of parts or damage resulting from any of the following: negligent use or misuse of the product, use on improper voltage or current, use contrary to the operating instructions, disassembly, repair or alteration by anyone other than Coleman or an authorized service center. Further, the warranty does not cover Acts of God, such as fire, flood, hurricanes and tornadoes.

Coleman shall not be liable for any incidental or consequential damages caused by the breach of any express or implied warranty or conditions. Except to the extent prohibited by applicable law, any implied warranty of merchantability or fitness for a particular purpose is limited in duration to the duration of the above warranty or conditions. Some states, provinces or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state or province to province.


### **HOW TO OBTAIN WARRANTY SERVICE**

For warranty service please return this item to your nearest Coleman retailer. You can find the nearest authorised Coleman Service centre by calling (02) 8762 5000. Coleman Brands Pty. Ltd. Suite 2, 1 Figtree Drive, Sydney Olympic Park NSW 2127 [www.colemanaustralia.com.au](http://www.colemanaustralia.com.au).

Do not mail products with fuel tanks or with disposable propane cylinders. If you have any questions about this warranty please contact Coleman.

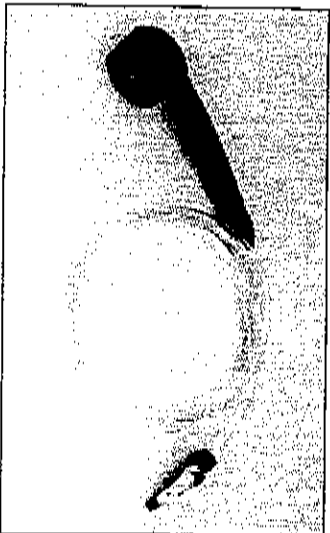

**Spray Adapter**  
1.2 metre long hose easily attaches to faucet of **Hot Water on Demand™** with Quick-connect fitting. Handled spray head is ideal for a light shower.  
*Not Included*  
(#2300-512)

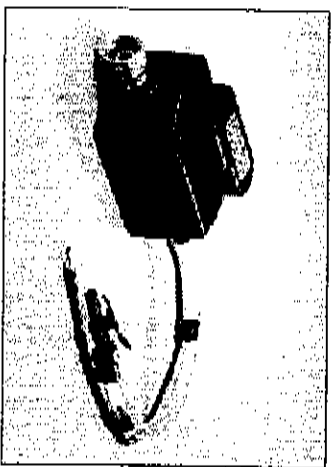

**Water Hose Adapter**  
Regulates water pressure from input hose up to 690 kPa. Simply attach to **Hot Water on Demand™** for a continuous water supply.  
*Not Included*  
(#2300-511)



**19 Litre Water Container**  
Collapses for compact storage when not filled with water – handled carrier includes spigot to dispense water. Threaded opening is sized to screw securely to pump of **Hot Water on Demand™** for a sealed connection.  
(#809B605T)



**Padded Carry Bag**  
Sized to carry the **Hot Water on Demand™**. Adjustable shoulder strap or barrel handles, includes two zippered side pockets perfect for carrying two 465 gram, propane cylinders or other accessories. Includes a PVC raincover that can be used to protect heater from the elements.  
*Not Included*  
(#2300-200)

Visit us at  
[www.colemanaustralia.com.au](http://www.colemanaustralia.com.au)



Coleman Brands Pty. Ltd. Suite 2, 1 Fidgee Drive, Sydney Olympic Park NSW 2127.  
[www.colemanaustralia.com.au](http://www.colemanaustralia.com.au) • Phone: (02) 8762 5000  
©2004 The Coleman Company Inc. All Rights reserved.  
Coleman® is a registered trademark of The Coleman Company, Inc.

Made in China

Patents Pending